
# **Download the AvidCard Driver on Mac OS Catalina**


## **AvidCard**

#### **Step 1: Download the Mac OS Driver**

- 1.1 Download the Mac OS driver from the AvidCard website: http://www.avidcard.com/cac
- 1.2 Find the driver in "Downloads," or at the bottom left of your screen.
- 1.3 After clicking on the zip file, a blue file folder will appear. Click on the blue file folder.

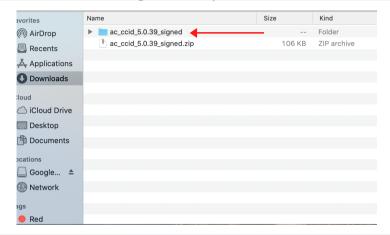

1.4 After clicking on the blue file folder, click on the scmccid file.

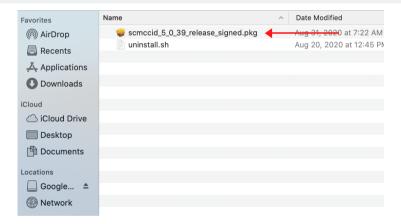


#### Step 2: (Optional) Change Macbook settings to install the driver properly

2.1 You may see a pop-up that says the driver can not be installed. In "System Preferences" select "Security & Privacy." If you do not see this pop-up, skip this step and proceed to Step 3.



2.2 On the bottom of the "General" tab you'll see a message that says the file was blocked. Select "Open Anyway." You may have to first select "App Store and identified developers."

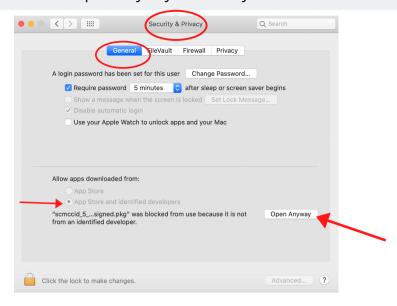

2.3 Return to the scmccid file and double click it to proceed with installing the driver.

### Step 3: Finish Install and Confirm Driver is Downloaded

3.1: Continue and agree through all the steps required.




3.2: Confirm driver is downloaded by clicking "About this Mac" then "System Report"





3.3: On the left-hand side, click "USB." Under "USB Device Tree," click "USB 3.1 Bus." You should then see the reader name appear beneath, confirming the driver has been downloaded successfully.

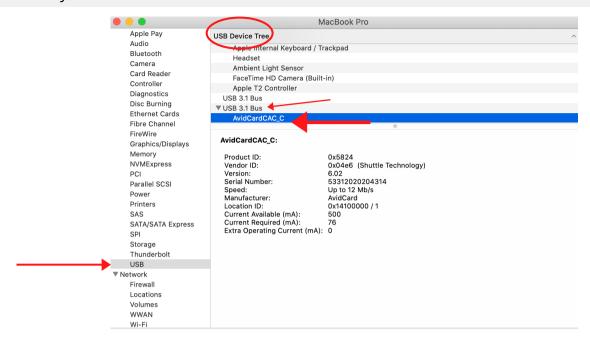

#### **Step 4: Reboot your computer**

4.1: After successfully downloading the driver, now you must reboot your computer. Once your computer has rebooted, plug back in both your card reader AND your card. You should see a notification on the top right of your screen that looks like the image below. You have successfully set up your reader and can now use it with your card.

